ELONEX

ebook

User Guide

705EB 7″ eBook Reader

Introduction

Preface

Please read this user manual carefully to help you get the most out of your eBook. Also please observe the safety warnings so you do not damage your device or more importantly yourself. A full support site is available at www.elonex.com/support

Package Contents

Before using your 705EB eBook Reader, please check your package contents to ensure there aren't any items missing. If any of the listed items are missing, please contact your point of purchase for assistance.

The package includes:

1. 705EB 7" eBook Reader
2. USB cable (for data and power)
3. 3.5mm Earphones
4. Quick start guide
5. Warranty Card

Help and Support

12 Month Limited Warranty
To help you get the best out of your product we provide you with a limited 1 year Return to Base Warranty and Support Helpdesk (see www.elonex.com for more details).

Technical Support
For all technical support please contact our helpdesk using the details below:

0871 222 3456
(Mon- Fri national rate)

eMail Questions
support@elonex.com

FAQ's and Updates
www.elonex.com/support

If you have any problems or questions please DO NOT take your eBook back to the store – Contact us for some helpful advice.
This does not affect your statutory rights.

THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE UNIT'S CABINET THAT MAYBE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.

THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE MANUAL ACCOMPANYING THE UNIT.

WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. NEVER ATTEMPT TO OPEN THE CABINET. DANGEROUS HIGH VOLTAGES ARE PRESENTED IN THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE- BLADE PLUG WITH WIDE SLOT AND FULLY INSERT.
THE APPARATUS SHALL NOT BE EXPOSED TO WATER AND NO OBJECTS FILLED WITH LIQUID SUCH AS VASES SHALL BE PLACED ON THE APPARATUS.

CAUTION:

TO ENSURE THE PROPER USE OF THE UNIT, READ THIS MANUAL CAREFULLY AND KEEP IT FOR FUTURE REFERENCE.
IF THE UNIT REQUIRES SERVICING, CONTACT THE SELLER.

WARNING:

FCC REGULATIONS STATE THAT ANY CHANGE OR MODIFICATION TO THE EQUIPMENT, NOT EXPRESSLY APPROVED BY MAKER OR ITS AUTHORIZED PARTIES, COULD VOID USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

WARNING:

The mains plug/appliance coupler isused as the disconnect device, the disconnect deviceshall remain readily operable.
Always remember to remove theplug from the mains socket before disconnecting thepower leas from the unit.
The apparatus shall not beexposed to dripping or splashing and that noobjects filled with liquids, such as vases, shall beplaced the apparatus
No naked flame sources suchas lighted candles should be placed on theapparatus
The use of apparatus inmoderate climates

WARNING:

Attention should be drawn tothe environmental aspects of battery disposal.
Danger of explosion if batteryis incorrectly replaced. Replace only with the sameor equivalent type.

Appearance

ebook
03:21
Slide Shows
Countryside.jpg
Spiral.jpg
Beach.jpg
Countryside.jpg
Earth.jpg
Manner.jpg
Waterfall.jpg
NYNY.jpg
Colour.jpg
FruitSplash.jpg
Daisy.jpg
Paradise.jpg
Previous
Next
Play/Pause
Select
Power Button
Zoom
Button
Return
Button
Menu
Button
Arrow
Buttons

Appearance

mini USB Port
3.5mm Earphone Output
microSD Card Slot
AV Output
Internal Microphone
Speaker
Reset Button

Powering your eBook ON/OFF

- Press and hold the [Power] button for 2 seconds to turn on.
- It may take a few moments for eBook to turn on and load.
- If eBook does not turn on, ensure the eBook is fully charged.
- To turn off eBook, press and hold [Power] button for 2 seconds.

Charging the eBook

- You need to charge the eBook prior to using it for the first time or when battery power is low. Elonex recommends charging it for **8 hours** the first time you use it to ensure the best battery life.
- You can charge the eBook via the supplied USB cable attached to a PC.
- When charging through PC, you cannot operate the eBook. To operate the eBook during charging, click the 'Safely Remove Hardware' from the bottom right corner of your desktop while the eBook is still connected to your PC.
- It will take about 4 hours to fully charge the eBook in standby mode (LCD off)
- The battery status is displayed in the top right hand corner of the main menu screen.

PLEASE NOTE: Battery life is dependent on the usage of the eBook – ie the battery life will be longer when reading a book rather than playing video.

Inserting a Memory Card

The eBook supports micro SD cards, up to 32Gb.

To insert a Memory card:

- Check that the SD card is in the correct position with the contact pins facing downwards as illustrated below.

  NOTE: You can damage the card and the eBook if SD card is not inserted in the correct position.

- Push the SD card into the card slot until it clicks.

To remove the Memory Card:

- To remove SD card, push the SD card once again until it clicks.
- When a SD card is inserted in or ejected from the eBook, it may take few seconds for the eBook to update the content.
- Please avoid inserting or ejecting SD card when another operation is running as this may cause the eBook to crash.
- If the system is not responding, press and hold the Power button for 6 seconds to reset and turn it off.

Starting from Home Menu

When the eBook is turned on, you will enter into the Home Menu.

- Navigate around the screen using
- Select a function
- Return to previous screen

Reading eBooks

Enjoy your favorite eBooks on the 705EB. With 4Gb of storage there is enough space for some 3000 books. This can be increased by micro SD card to add another 32Gb.

Where to get eBooks from?

You can get eBooks from anywhere you like, as your 705EB isn't locked to one supplier like many devices. You can download the latest blockbuster novels from your favourite retailer or alternatively visit http://freebook.elonex.com to download over 1 Million free books and magazines.

What type of eBooks should I get?

The 705EB supports DRM (copyright protected) as well as non-DRM eBooks in ePub, PDF, HTML and TXT formats.

Elonex recommends that if you have a choice, you should download eBooks in the ePub format as this gives you the most flexibility.

How do I get new eBooks onto my 705EB?

To download new eBooks you need a computer or a laptop. You can simply drag and drop **free** eBooks to your 705EB (see Page 26 for more details). To transfer DRM protected eBooks (ones that you buy) you need to use Adobe Digital Editions which is free and easy to use (see page 18 for more details)

How to read an eBook

To open an eBook select the **eBook** option from the main menu. Then choose your eBook via the following categories

Elonex recommends you choose to browse by 'Book Cover'.
Then scroll to your chosen eBook using the arrow keys and press the Select button to open it and start reading.

Please note that 12 books are shown per page – once you have multiple pages of books you can jump to the next page by pressing the 'Previous' or 'Next' arrow half way up the side of the eBook.

Changing the page orientation.

Once you are reading your ebook if you prefer the page orientation in **landscape** format just 'press and hold' . 'Press and hold' again to return to **portrait** mode.

How to change the font size

A single tap on the button will let you alter the font size from Extra Small, Small, Medium, Large to Extra Large to make reading easy on the eye.

How to Jump to a Page

To quickly jump to a page instead of scrolling through every page simply press then "Page Jump". Then enter a page number via the Navigation keys and then jump to that page.

Bookmarking a Page

To create a Bookmark press then "SaveMark" to set the page you are reading as a bookmark

To load a Bookmark press then "LoadMark" to select a previously saved bookmark and jump to that page.

To delete a Bookmark press then "DelMark" to delete any previously save bookmarks

Changing the screen brightness

To change the screen brightness to make reading easy on the eye press then "Brightness" and "select". You can then choose from **One** (darkest), to **Five** (brightest) and press Select to confirm.

How to set up Automatic Page Turning

When reading an eBook you can touch the arrow keys to move forward or backward through the book.
However, you can also setup automatic page turning if you want to go 'hands-free'. Press the button and choose "Browser Mode". Choose Auto Mode to engage auto page turning. Then press the key and select "Flip Time". This sets the auto page turn rate from: 10s, 15s, 20s, 25s, 30s, 45s, 60s to 90s so you can read at your preferred pace.
To change back to turning the page by hand go to "Browser Mode" then select "Manual Mode"

Text to Speech (TXT format only)

If you load a .txt format file the 705EB will read the book to you as and audiobook using the text-to-speech function. After selecting the txt file just press to start or pause.

Recently Read Books

The recent category is a handy feature for picking up where you left off. It shows all the ebooks previously viewed. The books listed are "bookmarked" at the last page you were reading.

Just tap to continue reading.

If you hold the select button down you get the option to delete the chosen or all eBook bookmarks

Dictionary / Word Finder

A useful word finder / dictionary application.

Use the buttons to navigate around the QWERTY keyboard.

Press to select the letters required.

When the word you want appears in the list press to remove the keyboard.

Use the buttons to highlight the required word and press to see some definitions.

Playing HD Video and Movie Clips

The 705EB video player supports a wide range of 720p HD video formats including avi, dat, flv, mkv, mpg, mpeg and vob. Elonex recommends you use AVI files formatted to a 7" widescreen in 16 : 9 aspect ratio (800 x 480 pixels).

After selecting the **Video** option from the main menu, select the folder where your video files are stored (a video folder already exists for this purpose). Then select the video you wish to view to start playback.

Playing Music

The 705EB Music Player is a great way to listen to your favourite music, audiobooks or MP3 podcasts when you're out and about. The 705EB is compatible with MP3 (recommended), wma, aac and wav music formats.

To play Music

Select '**Music**' from the home screen. Then choose the way you would like your music library displayed to you - ie by artist, album, genre or favorites. Then select the song or album you wish to play and the music will playback.

Please note *you can listen to music using the onboard speaker or using earphones plugged into the 3.5mm earphone port.*

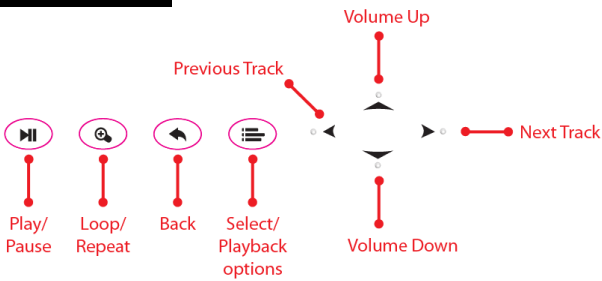

FM Radio

The 705EB has an FM radio so you can listen to radio on the move.

Please Note *– you must have your earphones plugged in to receive FM Radio.*

Please Note *- Reception depends on the quality of the broadcast signal in your area.*

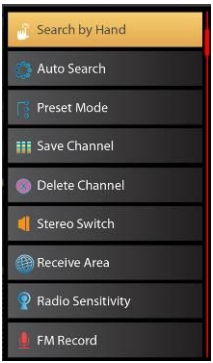

Radio Settings

- Search by Hand
- Auto Search
- Preset Mode
- Save Channel
- Delete Channel
- Stereo Switch
- Receive Area
- Radio Sensitivity
- FM Record

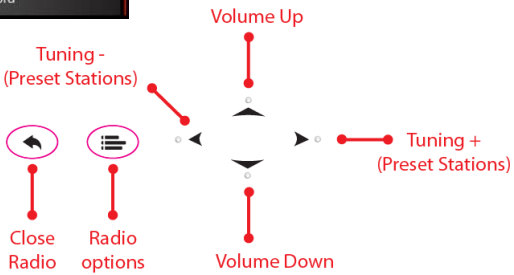

Photos

A fun way to keep and share all your photo's with friends and family. Supported picture formats include BMP, JPG and PNG

Using the navigation buttons on the home screen highlight the **Photo** icon and press select. Select the Photo folder to see all your pictures arranged in a thumbnail grid. Select a thumbnail to view the photo

Whilst viewing your photos press select to get further options.
Zoom in and out, rotate, view as a slideshow or set your favorite picture as a desktop background.

Transferring eBooks to your eBook

Preparing your PC and eBook

The process of downloading, managing and transferring eBooks to your 705EB is a simple 3 step process. **The first time you set-up your eBook you must complete a few procedures to prepare your computer.**

Setup 1: Install Adobe Digital Editions

*Adobe Digital Editions is the industry standard software for downloading and managing your eBook collection. The best bit about it is that it is **free** and easy to use.*

- *To download Adobe Digital Editions go online to* www.adobe.com/products/digitaleditions

- *Find the installer which will look like the box shown to the right.* ***Click Install.***

- *You will be asked to confirm the install.* ***Click Install***

Adobe® Digital Editions Installer
This application can read and write files to your system. Would you like to continue installing?
Install
Cancel
Installing applications may present a security risk to you and your computer. Only install from sources that you trust.

- ***Click YES*** *to continue the installation*

Adobe® Digital Editions Installer
Adobe® Digital Editions® Installer
Press yes to download and continue the installation of Adobe® Digital Editions®
Yes
No

- *A pop-up installer will appear. Follow the installer procedures choosing the install options and path you require.*

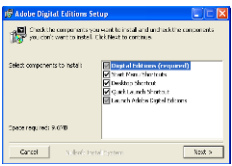

- *When the install has completed, please agree to the User Agreement and Digital Editions will automatically open.*

  You can alternatively open it by pressing ***Start > All Programs > Adobe > Adobe Digital Editions > Adobe Digital Editions***

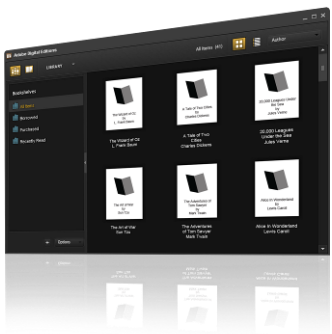

For Help on using Digital Editions press F1 on your keyboard.

Setup 2: Getting an Adobe ID

*In order to use Digital Editions you must create an Adobe ID which allows you to protect your eBook investments. This is also **free** and only takes a second.*

- *When Digital Editions opens for the first time **Setup Assistance** will ask you to enter your Adobe ID credentials.*

- *If you don't have an Adobe ID click on '**Get an Adobe ID online"** and follow the online procedure to get your Adobe ID credentials*

ADOBE® DIGITAL EDITIONS
Digital Editions makes it easy to transfer protected eBooks between multiple computers and mobile devices. To enable these features, you need to authorize each of your computers with your Adobe ID. More Info
If you don't have an Adobe ID, it's free and easy to get an Adobe ID online
Authorize Computer (Recommended)
This option enables you to read protected items that you download with Digital Editions on up to six computers and mobile devices. It also enables you to restore your eBooks from backup should you ever need to re-install your operating system.
Please enter your Adobe ID and Password below, then click Activate.
Adobe ID (email address)
Did you forget your Adobe ID?
Password
Did you forget your password?
Don't Authorize Computer
With this option, protected items that you already have or download later will be "tied" to this particular computer, will not be readable on other computers or devices, and can't be restored from backup if the operating system is re-installed.
Go Back
Cancel
Activate

Setup 3: Authorising your Hardware

Once you are logged into Adobe Digital Editions you must authorise your computer as well as your eBook hardware. This is so the hardware recognises you as the owner of the eBook Reader and the eBook content.

Authorising your Computer

- *When Digital Editions opens for the first time you will be asked to enter your Adobe ID credentials. Enter these and press **Authorise.***
- *Once activated press **Finish***

Authorising your eBook

- ***Plug** your USB cable into your eBook and the USB port in your PC.*

- *Once the eBook has automatically installed itself with your operating system, Digital Editions will automatically detect the eBook as a Mobile Device. Press **Authorise Device**.*

- *When the eBook is authorised it will appear as a Bookshelf in your list of Bookshelves as the* ***705EB eBook***

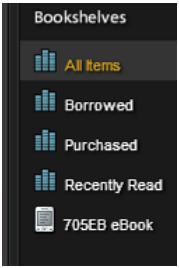

You have now completed the necessary steps to start downloading and reading eBooks. This is the only time you need to do this, you don't have to do any of the previous instructions again each time you download a book.

If you have any problems with this process please call the technical support helpdesk on 0871 222 3456 (national rate) or email support@elonex.com.

Downloading and transferring eBooks

The process of downloading, managing and transferring eBooks is a simple 3 step process.

Step 1: Downloading an eBook

- *Once you have chosen and purchased an eBook as instructed by your chosen retailer, you will be asked to **Download Item**. Press this button.*

- *In the pop-up that appears press **open** and your eBook will download.*



- *It will automatically load into **"Purchased eBooks"** in Digital Editions, ready for you to transfer to your eBook Reader.*

Step 2: Transferring eBooks into Digital Editions

*NOTE: When downloading an eBook if you press **open** the eBook will automatically save into Digital Editions and My Documents and you will not have to complete this step.*

Transfer the eBooks into Digital Editions

- In the top left corner of Digital Editions click Library and a pop-up menu will appear.

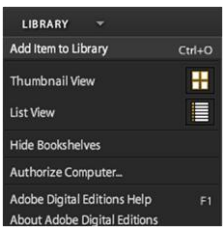

- A file browser will appear. Select the eBook you wish to add to the Library and select Open
- The eBook will automatically be added to your Digital Editions Library

Digital Editions gives you various ways to organise and use your eBooks. Please see the Adobe website (www.adobe.com) for more information or press F1.

NOTE: DRM is a copyright protection method used by publishing houses to protect content privacy / piracy.

Step 3: Transferring eBooks onto your eBook

Once you have your eBooks imported into Digital Editions, transferring them into your eBook is a simple drag and drop process.

- Plug your USB cable into your eBook and the USB port in your PC. If the eBook is ready for transfer the eBook screen will show "**connected via USB**" and it will show up in the list of Bookshelves in Digital Editions as the 705EB eBook.

- Find the eBook you want to copy.
- Drag and drop the eBook icon into your 705EB Bookshelf

  (Over the eBook icon **click** and hold your left hand mouse button and *drag* the file to over the top of the 705EB Bookshelf and drop it)

- The file will copy across to the eBook Reader. You can then unplug the USB cable, open the eBook and start reading.

NOTE: *You will only be able to transfer DRM protected eBooks to a total of 6 authorised computers or eBooks*

NOTE: *If you transfer an eBook outside of Digital Editions it will not decrypt the DRM encoding and you will not be able to read the eBook.*

Transferring Multi-Media Files to your eBook

To transfer movies, music and picture files from your pc to the 705EB, simply connect the supplied USB to micro USB cable. **You can drag and drop multi-media files to your eBook like you would on any flash device (like a USB stick or memory Card).**

The 705EB will be displayed in "**My Computer**" as a folder called "**705EB**".
If you have added a Micro SD Card - 2 removable discs will appear - the first is the eBook's internal memory and the second is the Micro SD card.

To transfer files to your eBook, simply 'copy & paste' or 'drag and drop' files to the corresponding folders.

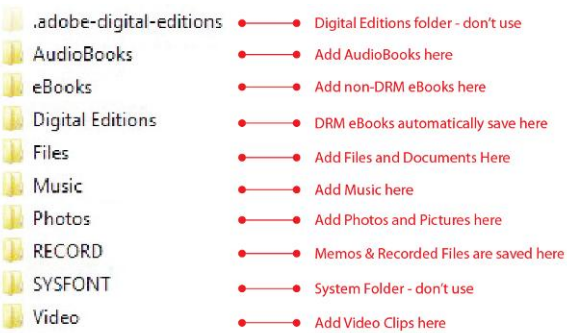

Please Note: To transfer DRM protected eBooks please see page 18 for instructions on using Adobe Digital Editions.

Troubleshooting

If the eBook does not function as it is expected, please try the following steps.

The eBook is not responding or cannot be turned on.

- Reset the eBook by pressing and holding the power button for 6 seconds. The eBook will be forced to shutdown if it is on and you are required to restart the eBook again.
- Battery has been fully depleted. Please charge the eBook via USB or USB AC Adapter.

Battery Life seems short

- The battery has not used been used for a prolonged period. Please recharge the battery again
- The battery is not fully charged. Please charge the eBook for at least 4 hours from a suitably powerful source (please note that some USB's on laptops are not powerful enough to charge external devices).

An eBook cannot be read

- Copyright protected books cannot be read on any device other than the 6 devices authorised to your account in Adobe Digital Editions.
- Check if the book has expired.
- Check if the book format is supported by the eBook.

The eBook cannot be operated during USB connection.

- The eBook cannot be operated while it is connected to PC.
- Eject the eBook from computer to resume operation.
- To use the eBook while charging, click on the [Safely Remove Hardware] icon located on the left lower corner to disconnect data connection with computer. After the eBook is safely removed, computer will only charge the eBook and you can now resume normal operation.

Standard Operation

- Never subject the eBook to extremes of light, temperature, moisture or vibration.
- Never wrap your eBook in anything when it is being used or charged. Heat may build up in while charging or if it is used for an extended period of time.
- Do not use or store your eBook in:
  A. Extreme high temperature, such as in a sun-heated car
  B. Direct sunlight.
  C. High humidity or places with corrosive substances
  D. Sub-zero condition, especially during winter

On Headphones

- Listening to audio at high volume for extended periods of time can cause hearing damage. To avoid damage to your hearing, keep the volume at moderate level.
- Do not use headphones while driving, cycling or operating any machinery. It can also be potentially dangerous to play at a high volume while walking, especially at pedestrian crossings.

On SD card

- After inserting an SD card, if the eBook has no response, please take out and insert again.
- Do not remove the SD card or turn off your eBook during data writing or reading to prevent damage to data and to the eBook.
- Make sure the SD card is unlocked before writing or deleting data in the SD card.
- Backup your files and data before formatting the SD card. Please format the SD card in FAT format.

Important Safety Instructions

All safety and operating instructions should be read before the product is operated. Always adhere to these instructions and follow the proper working procedures for the device. Shut the eBook down properly and do not forget to save your work often. Remember to periodically back-up your data as Elonex accepts no responsibility for data loss. Failure to adhere to these Safety Instructions may invalidate your warranty.

Peripherals
Take care when using peripheral devices. Always check compatibility with your device and follow the manufacturer guidelines for installation and proper use.

Cleaning
Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners, volatile chemicals or aerosol cleaners as these may cause damage to your eBook chassis or internal components. Use a damp cloth for cleaning.

Water and Moisture
Do not use this product near water, for example near a kitchen sink etc. Any liquid entry into the internal workings of this unit may damage your eBook.

Heat
The product should be situated away from heat sources such as radiators, heat stoves or other products that produce heat.

Power Sources
This product should be operated only from the type of power source indicated on the marking label and only using an Elonex authorised power adapter.

Grounding
This product should only be used with proper electrical grounding. Please only use power supplies supplied by Elonex otherwise this may cause damage to the electronics or injury to yourself.

Power Cord Protection
Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. If your power cord is damaged in any way please contact customer services.
Lightning

For added protection for this product during a lightning storm or when it is left unattended and unused for long periods of time, please unplug it from the power socket. This will prevent damage to the product due to lightning and power line surges.

Overloading
Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.

Object Entry
Never push objects of any kind into your eBook through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

Servicing
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
Damage Requiring Service
If your eBook is damaged or behaving abnormally, unplug this product from the wall outlet and refer servicing to qualified service personnel. Please refer all warranty claims to Elonex Warranty Service.

Replacement Parts
Only use replacement parts specified by Elonex. Unauthorised substitutions may result in damage to your unit.
Avoid EM interference
The product should be situated away from all sources of Electro Magnetic radiation, ie microwaves, amplifiers, speakers etc. These can hinder proper performance and damage your data.

SD card
After inserted an SD card, if the eBook has no response, please take out and insert again.
Do not remove SD card or turn off eBook during data writing or reading to prevent damage to data and to the eBook.
Make sure the SD card is unlocked before writing or deleting data in the SD card.
Backup your files and data before formatting the SD card. Please format the SD card in FAT.

Notice

Elonex reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

©2011 Elonex International

Trademarks:

All trade names and trademarks are the properties of their respective companies.

Copyright © 2011 Elonex International, All Rights Reserved.

This product contains Adobe® EBook® Mobile software under license from Adobe Systems Incorporated, Copyright© 1995-2011 Adobe Systems Incorporated. All rights reserved. Adobe and eBook are trademarks of Adobe System Incorporated.

End of life Disposal

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment. **WARNING!** This product contains batteries and electronics that may be harmful to the environment; they should not be discarded with normal household waste but taken to your local collection centre for recycling.